


# Sunny WebBox Mounting Template

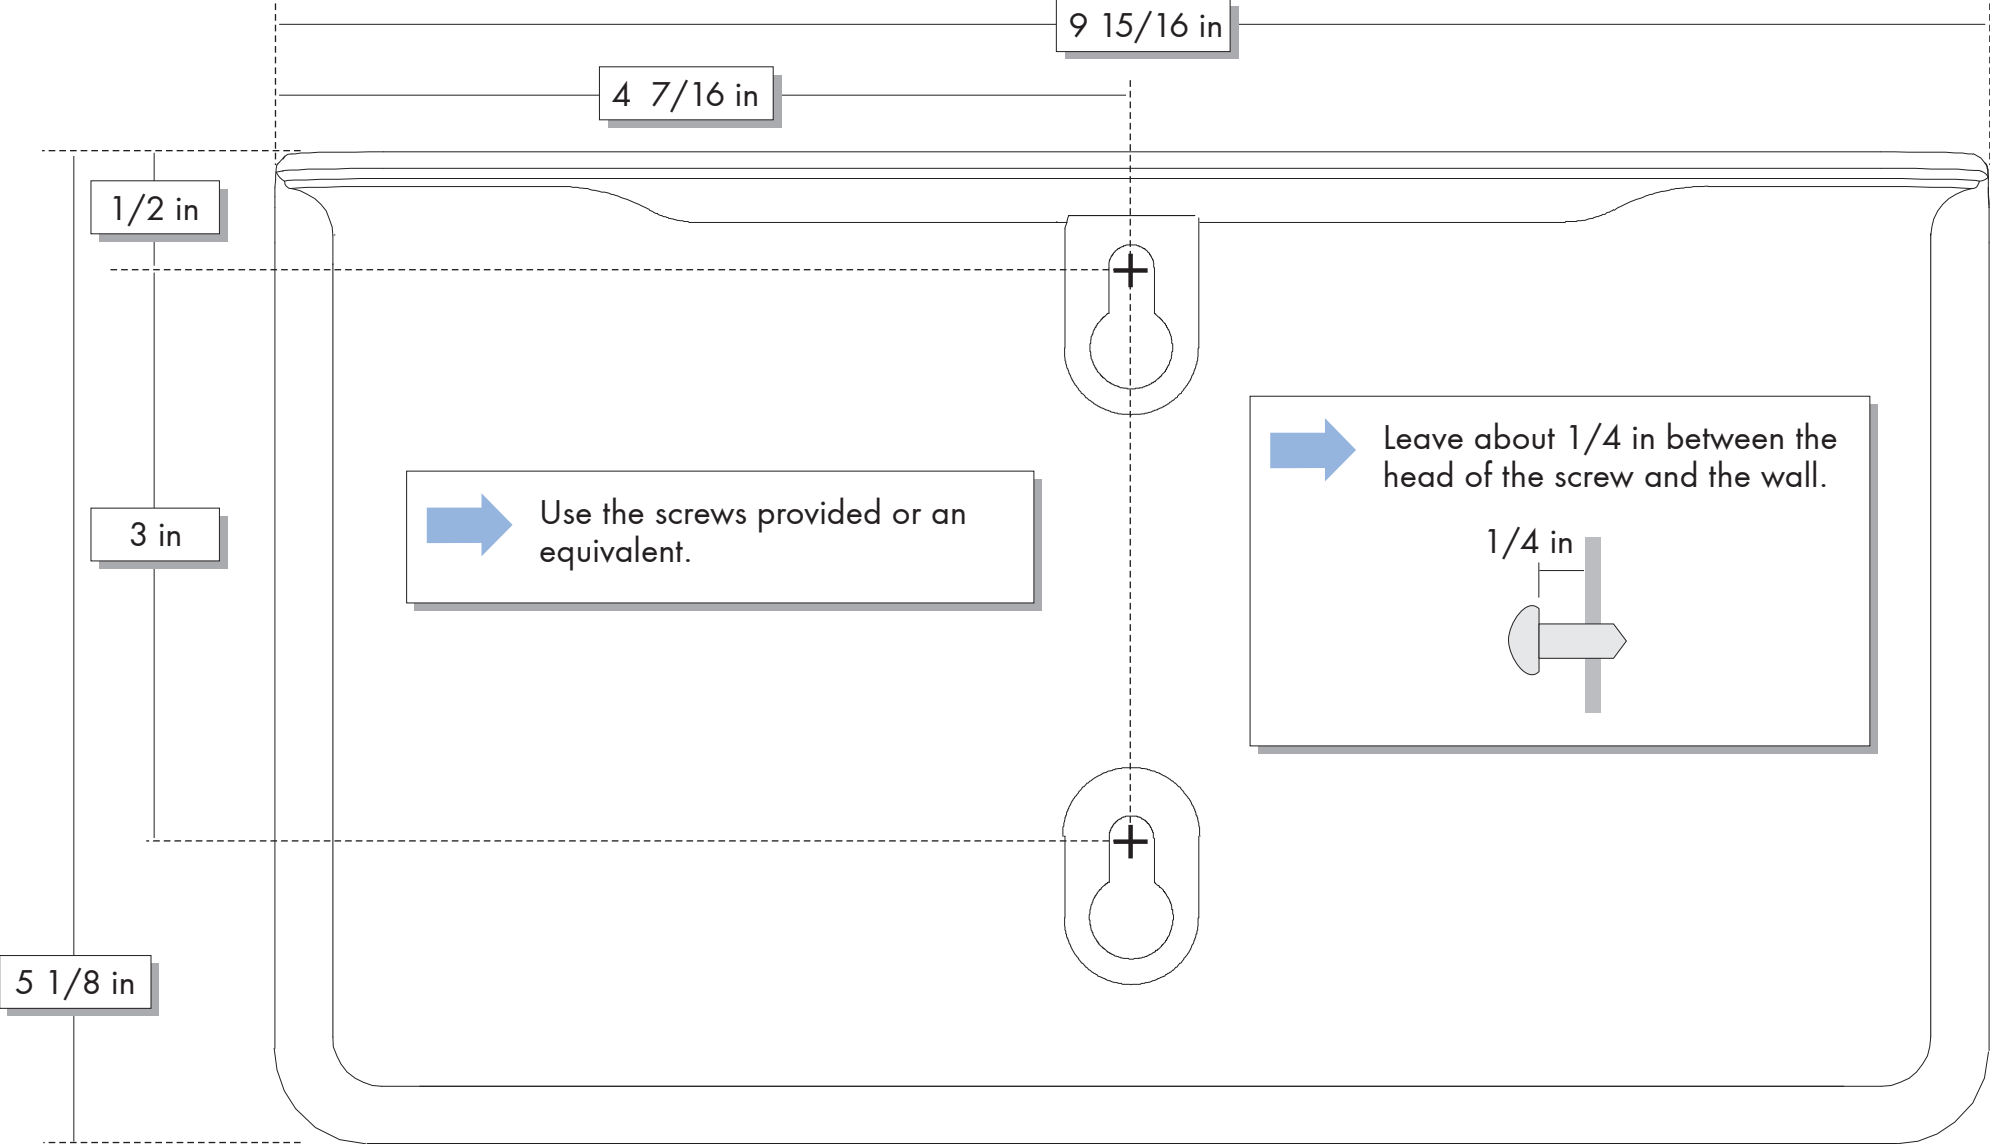

Use the screws provided or an equivalent.

Leave about 1/4 in between the head of the screw and the wall.

1/4 in

Leave a minimum of 6 inches clearance below the Sunny WebBox for the connection of wires and cables. Leave ample wire bending radius.